

www.ihub.life


## Instalación




## Configuración de la Cerradura

### Reinicio de la cerradura

Para volver la cerradura a sus valores de fábrica, retire una de las pilas, presione el botón bajo la parte interna y manténgalo presionado mientras vuelve a colocar la pila, mantenga la presión hasta que la cerradura confirme el reinicio (5 a 7 segundos)

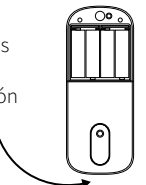


### Configuración de la Cerradura

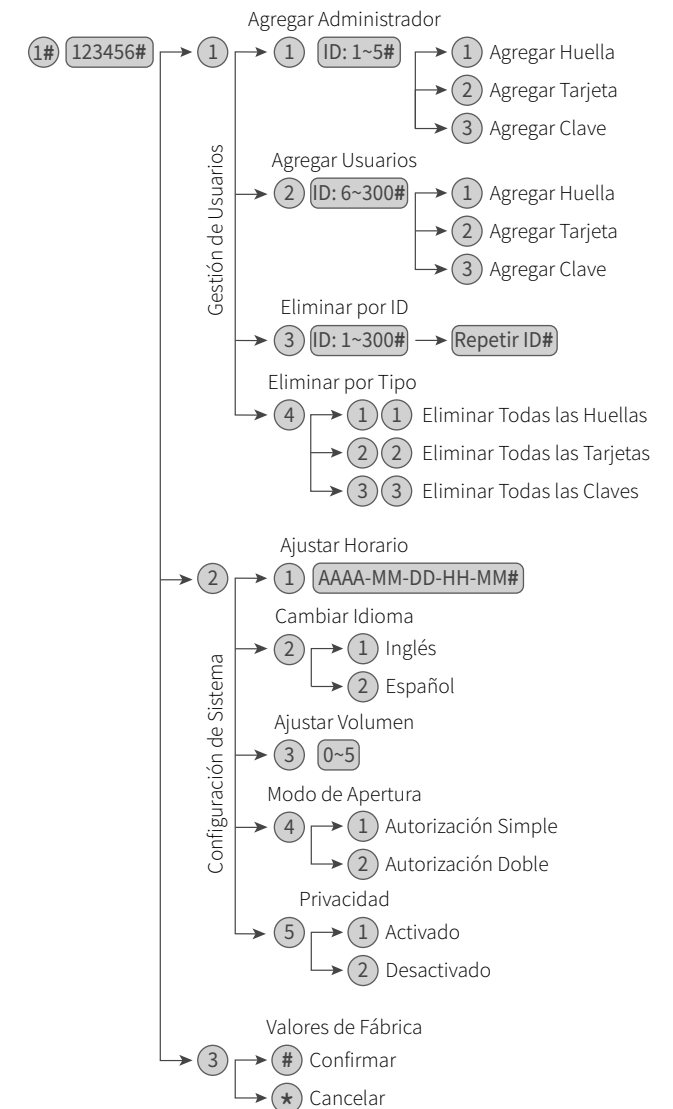

La aplicación admite varias Cerraduras en simultáneo. En una Cerradura que no se ha vinculado, la contraseña predeterminada es 123456 hasta que se agregue un dispositivo móvil como administrador.


## Vinculación de la Cerradura

- 01 - Descargue **TUYA SMART** de AppStore (IOS) o Google Play (Android)
- 02 - Instale la aplicación.
- 03 - Registre un nuevo usuario (mail o teléfono).
- 04 - Valide su cuenta, recibirá un mail o un SMS.
- 05 - Ingrese a la aplicación y seleccione "+ Agregar Dispositivo".
- 06 - En la categoría "Video Vigilancia" seleccionar "Cerradura WiFi".
- 07 - Seleccione su Red Local, debe ser un WiFi de 2.4Ghz, e ingrese la clave.
- 08 - Agregue un Administrador en la cerradura (ver pág. 3).
- 09 - Cuando la APP pida confirmación, toque el panel de la cerradura e ingrese 2#
- 10 - Valide su identidad con su huella o clave de administrador para registrar la cerradura en la Red.
- 11 - Asigne un nombre para la cerradura.
- 12 - La cerradura está lista para usarse.

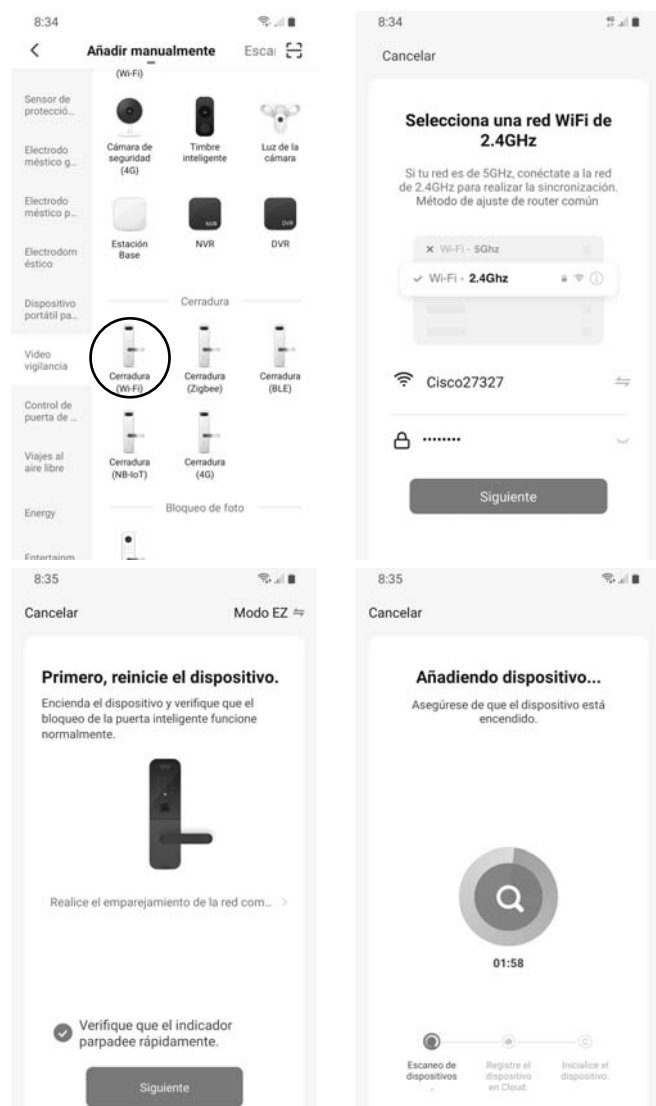

## Agregar Usuarios

Puede agregar dos tipos de usuarios, FAMILIA y OTROS. Los usuarios de la categoría FAMILIA tiene control total sobre todas las cerraduras del grupo. Los usuarios en la categoría OTROS solo tiene permisos de acceso a una cerradura particular. Desde el panel de usuarios puede editar el nombre, la foto, clave, tarjeta y huella.

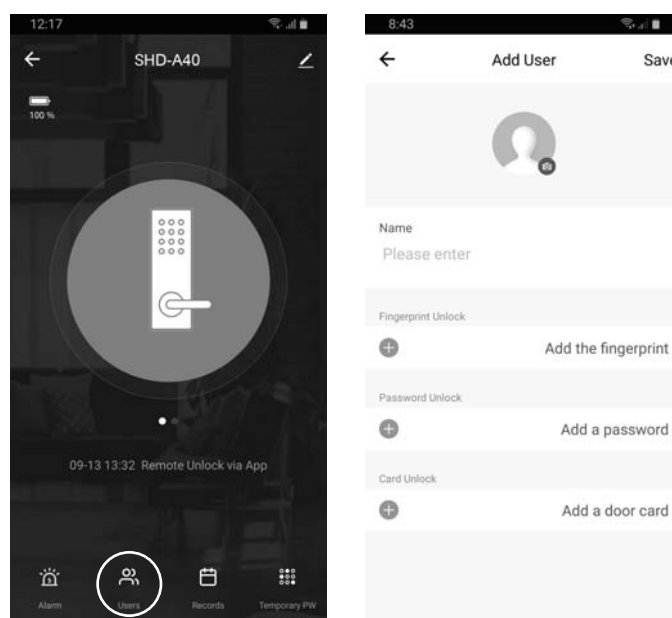


## Apertura Remota

Puede solicitar la apertura remota desde la cerradura presionando 4#. La APP muestra una notificación para autorizar la apertura.


## Gestión de Datos

Desde la aplicación puede acceder al registro de ingresos de sus Cerradura, actualizar el firmware, ajustar el reloj interno, modificar el sonido, desvincular la Cerradura, etc.

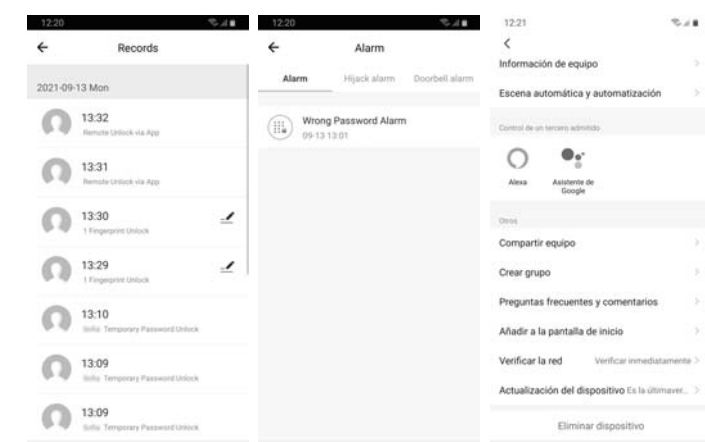

## Agregar Claves Temporales

Las claves temporales permiten habilitar accesos remotamente, puede generar una clave aleatoria o especificarla en la APP. Debe presionar 5# en la cerradura para comenzar a utilizarla.

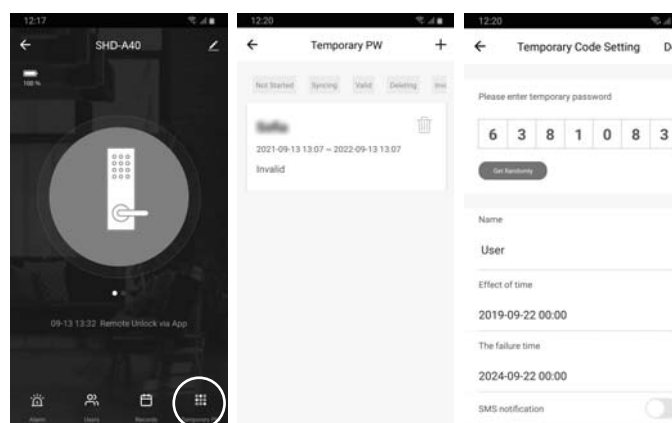

## Especificaciones Técnicas


### Métodos de Apertura

- APP (WiFi)
- Huella (200 u)
- Clave (150 u)
- Tarjeta (200 u)
- Llave Mecánica

### Especificaciones


- Medidas Exterior (mm): 170 x 63 x 18
- Medidas Interior (mm): 164 x 72 x 30
- Alimentación: 4 pilas AA
- Espesor de puerta (mm): 35~60
- Temperatura (°C): -10~55
- Humedad: 0~95%

# ihub SMARTLOCKS [SHD-A40] User Manual

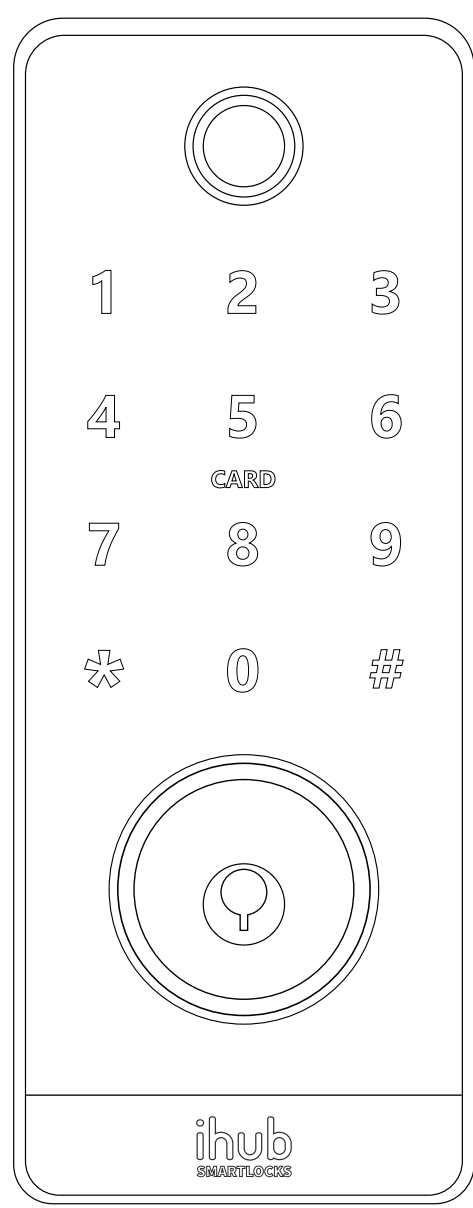

www.ihub.life

## Installation

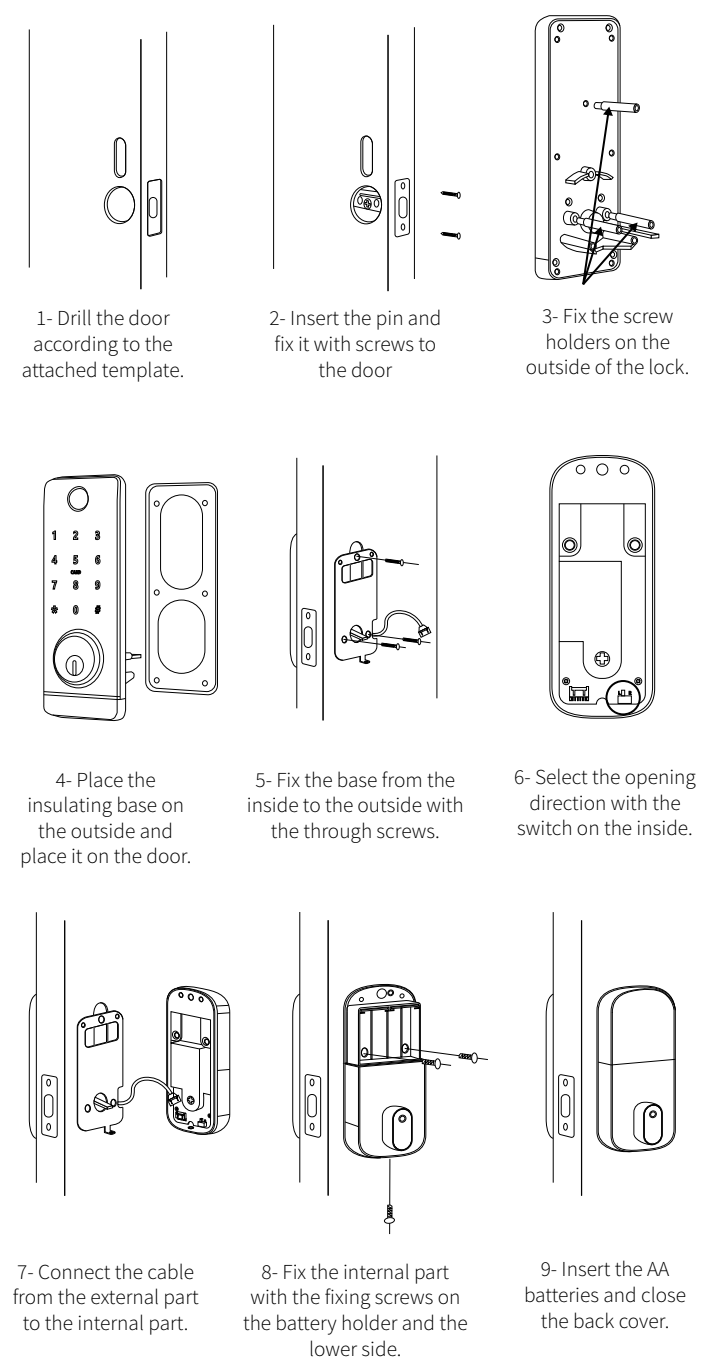

## Lock Setup

**Lock Reset**  
To return the lock to its factory settings, remove one of the batteries, press the button under the inside and keep it pressed while replacing the battery, keep pressing until the lock confirms the reset (5 to 7 seconds)


**Lock Configuration**

- 1# 123456#
  - 1 Add Administrator
    - 1 ID: 1~5#
      - 1 Add Fingerprint
      - 2 Add Card
      - 3 Add Password
    - 2 Add Users
      - 2 ID: 6~300#
        - 1 Add Fingerprint
        - 2 Add Card
        - 3 Add Password
    - 3 Delete by ID
      - 3 ID: 1~300# → Repeat ID#
    - 4 Delete by Type
      - 1 1 Delete all Fingerprints
      - 2 2 Delete all Cards
      - 3 3 Delete all Passwords
  - 2 System Configuration
    - 1 Adjust Date
      - 1 YYYY-MM-DD-HH-MM#
    - 2 Switch Language
      - 1 English
      - 2 Spanish
    - 3 Set Volume
      - 3 0~5
    - 4 Open Mode
      - 1 Simple Authorization
      - 2 Double Authorization
    - 5 Privacy
      - 1 Activate
      - 2 Deactivate
  - 3 Factory Reset
    - # Confirm
    - \* Cancel

The application supports several Locks simultaneously. For a Lock that has not been paired, the default password is 123456 until a mobile device is added as an administrator.


## Lock Linking

- 01 - Download **TUYA SMART** from AppStore (IOS) or Google Play (Android)
- 02 - Install the application.
- 03 - Register a new user (email or phone).
- 04 - Validate your account, you will receive an email or an SMS.
- 05 - Enter the application and select "+ Add Device".
- 06 - In the category "Video Surveillance" select "WiFi Lock".
- 07 - Select your Local Network, it must be a 2.4Ghz WiFi, and enter the password.
- 08 - Add an Administrator in the lock (see page 3).
- 09 - When the APP asks for confirmation, touch the lock panel and enter 2 #
- 10 - Validate your identity with your fingerprint or administrator password to register the lock on the Web.
- 11 - Assign a name for the lock.
- 12 - The lock is ready to use.

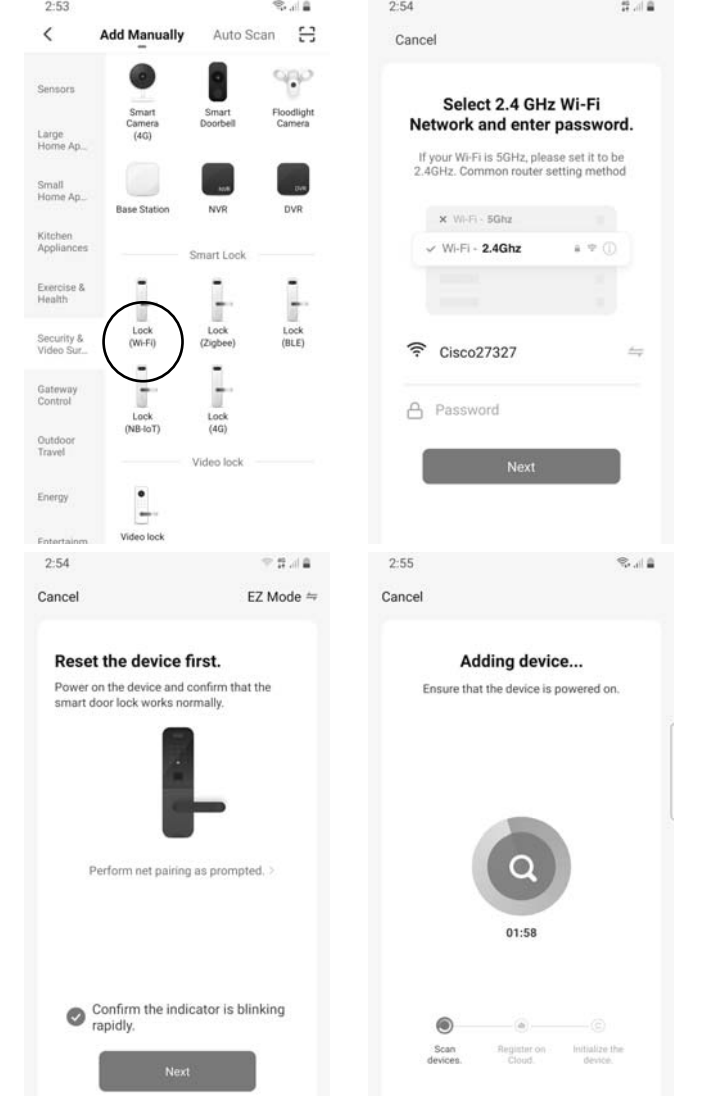

## Add Users

You can add two types of users, FAMILY and OTHERS. Users of the FAMILY category have full control over all the locks in the group. Users in the OTHERS category only have access permissions to a particular lock. From the user panel you can edit the name, photo, password, card and fingerprint.

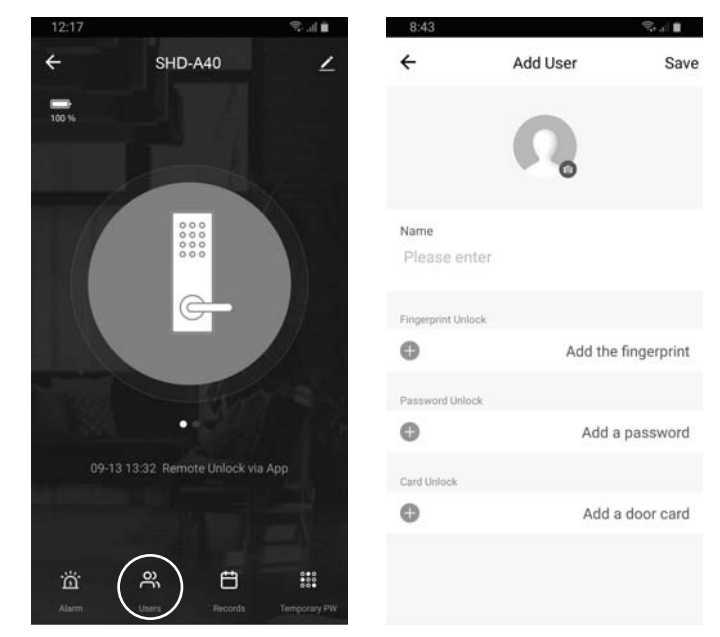


## Remote Open

You can request remote opening from the lock by pressing 4 #. The APP displays a notification to authorize the opening.


## Data Management

From the application you can access the income register of your Lock, update the firmware, adjust the internal clock, modify the sound, unlink the Lock, etc.

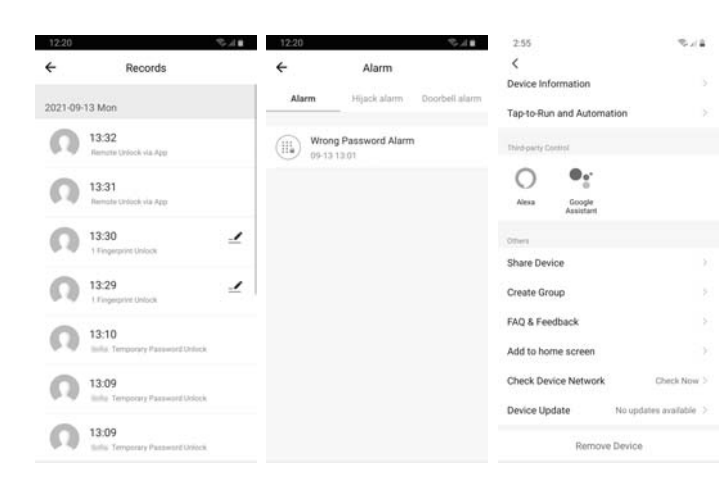

## Add Temporary Passwords

Temporary keys allow you to remotely enable access, you can generate a random key or specify it in the APP. You must press 5 # on the lock to start using it.

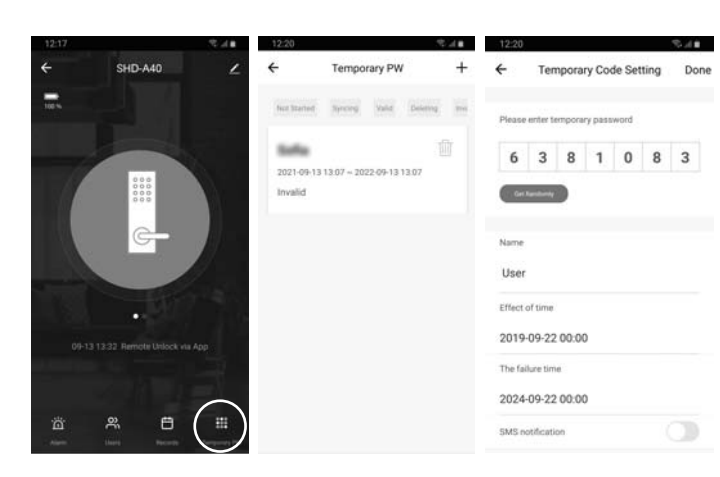

## Technical Specifications

- Opening Methods**  
APP (WiFi)  
Huella (200 u)  
Clave (150 u)  
Tarjeta (200 u)  
Emergency Key
- Specifications**  
Exterior Part (mm): 170 x 63 x 18  
Interior Part (mm): 164 x 72 x 30  
Power: 4 pilas AA  
Door thickness (mm): 35~60  
Temperature (°C): -10~55  
Humidity: 0~95%